



USER MANUAL

Issue 1



- Multifunction Meters
- Transducers & Isolators
- Temperature Controllers
- Converters & Recorders
- Digital Panel Meters
- Current Transformers
- kWh Energy Meters
- Analogue Panel Meters
- Shunts
- Digital Bargraphs
- Digital Multimeters
- Protection Relays
- Synchroscope Series
- Rotary Switches
- Power Supplies
- Test & Measurement

UNDER VOLTAGE PROTECTION RELAY OPERATING MANUAL AND INSTALLATION GUIDE

SUBJECT TO CHANGE WITHOUT NOTICE

This datasheet superseded all previous versions – please keep for future reference



Introduction

The under voltage protection relay protects system from the faults occurring on voltage line. Relay protects against under voltage faults. Front adjustment knob is provided for easy selection of time delay for power ON or restart time. Selection offers flexibility to user. Under voltage fault is auto resetting. The RLY LED indicate fault that helps for diagnosis purpose. Potential free relay contacts can be used for connection / disconnection of load or trigger alarm for annunciation purpose. Relay has fail safe operation. Application in Motor protection, conveyor system and for process industry etc.

Installation



Installation to be carried out by qualified person along with life protecting equipment to prevent hazardous shock. Isolate incoming supply before connection.

Do not expose device to rain, dust environment.

Keep at least 10-15 mm distance on both sides of device.


Do not install near vibrating environment.

Do not install near heat source.

Install fuses of 2 Amp in series with supply.


Use sealing provision to protect from unintentional adjustment.

Dimensions

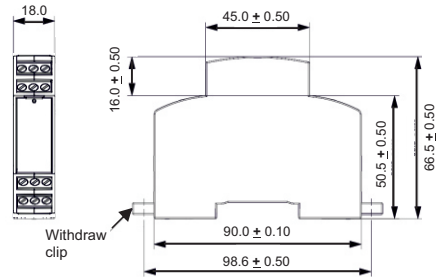


Mounting

Device has 17.5 mm standard housing suitable for Din-rail or wall mount. To mount on DIN rail use standard 35 mm DIN rail (DIN50022). Wall mounting is to be done with the help of withdraw clips provided on bottom side of housing. Mounting and removing of device is demonstrated in below figures.

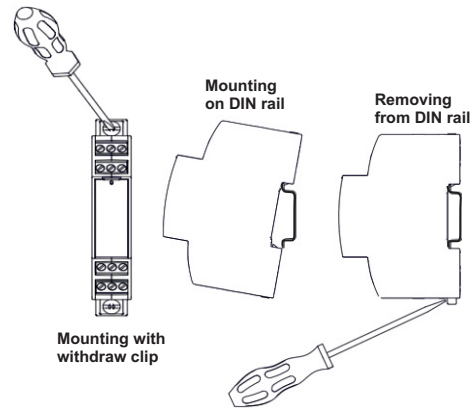


Terminals and Connector details

 

Input connectors are marked by numbers 1, 2, 3, 4 and potential free relay contacts are marked as 11, 12, 14 for relay. Rated switchgear and fusing is required to prevent inrush. Wire of 2 sq. mm is recommended for Input connection. Use suitable screw driver for tightening so that sufficient force can be applied, take care while tightening because excess force may result in damage to inside circuitry. Control voltage is to be applied with fusing to the connector numbered as 14. Refer diagram for input connection.

Connection diagram

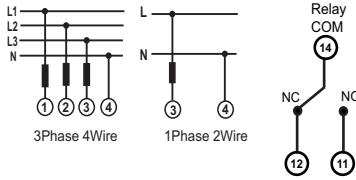

Parameter Settings

Nominal Voltage Vn* (Fixed - AC rms)	3 Phase 4 Wire: 415 / 400 / 380 VLL (Factory set) 1 Phase 2 Wire: 240 / 230 / 220 VLN (Factory set)
Under Voltage Trip point	75% of Nominal Value(Fixed)
Hysteresis value	2% (Fixed) of Nominal Value
Trip delay	Instant Tripping (less than 200 ms)
Reset / Power-ON Delay	5-15 Minutes (Variable)

Technical Specifications

Input Voltage	
Nominal Input Voltage	As given above in Parameter Settings
Max Continuous Input Voltage	127% of nominal value
Nominal Frequency	50 / 60 Hz
Input Voltage Burden B phase	< 16 VA approx.
Operating Voltage Range	70...125% of nominal value
Operating reference condition	
Reference Condition	23°C +/- 2°C
Input waveform	Sinusoidal (distortion factor 0.005)
Input Frequency	48-63 Hz ± 2%
Accuracy	
Accuracy	± 3% of Nominal Value
Restart/Power-On Delay Accuracy	± 0.8 sec
Response Time	< 200 msec
Applicable Standards	
Safety	IEC 61010-1-2010
IP for water & dust	IEC60529 (IP 20)
Pollution degree	2
Installation category	CAT III
High Voltage Test	2.2 kV AC 50Hz for 1 min. between all Electrical circuits
Environmental	
Operating temperature	-10 to +55°C
Storage temperature	-25 to +70°C
Relative humidity	0...90% non condensing
Shock (IEC 60068-2)	30 gn (300 m/s ²) duration 18 ms
Vibration	10...55 Hz, 0.15mm amplitude
Enclosure	Flame retardant, IP20 (front face only)
Relay Contacts	
Types of output	1CO
Relay configuration	Energised (relay is ON in healthy condition and relay is OFF in fault condition)
Contact Ratings	5A/250VAC/30VDC (resistive load)
Mechanical Endurance	1x10 ⁷ OPS
Electrical Endurance	1x10 ⁵ OPS
Mechanical Attributes	
Weight	80g Approx.
Dimensions	18 x 90 x 66 mm

Adjustments



Adjustment knob for Time Delay. It sets time in minutes for power ON delay or restart delay both 5 Minutes - 15 Minutes. Default Setting is 5 Min (Factory set)

Indication Table

Each LED has three states to indicate type of fault as explained in table below.

Pd = Power-ON delay

Rd = Restart delay

LED Indication	Continuous ON	Blinking	OFF
P-ON	Power ON	Pd/Rd	OFF
RLY	Healthy Voltage	--	Under Voltage Fault

Tripping Diagram

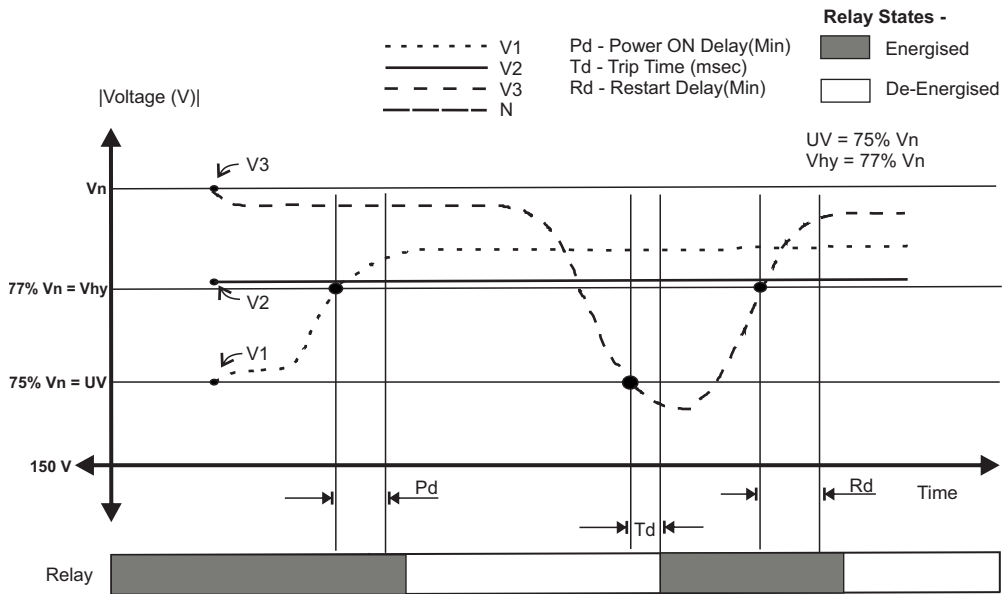


Figure 1 : V_n , V_{hy} & UV Tripping functionality for 3 Phase 4 Wire System with default Energised Relay

Note: This tripping diagram is also applicable for 1 Phase 2 Wire System, according to single phase connections.

Contact



Sifam Tinsley Instrumentation Ltd

1 Warner Drive
Springwood Industrial Estate
Braintree
Essex
CM7 2YW

Tel: 01376 335271
Email: sales@sifamtinsley.com

www.sifamtinsley.co.uk