



## DATASHEET

Issue 1.0



Multifunction Meters

Transducers & Isolators

Temperature Controllers

Converters & Recorders

Digital Panel Meters

Current Transformers

Analogue Panel Meters

Shunts

Digital Multimeters

Clamp Meters

Insulation Testers

## TRUE RMS DIGITAL PROTECTION RELAY

Omicron A is used to protect against Over Current, Under Current, Current Loss, Current Unbalance.

### Features

- True RMS Measurement
- Trip relay DPM with Class 0.5
- 4 digit 7 segment LED display
- 4 different parameters on site selection
- Stores last 15 faults Configuration via USB-based PRKAB
- Dual color LED for fault indication
- Detection of fault with display of parameter value

**SUBJECT TO CHANGE WITHOUT NOTICE**

This manual superseded all previous versions – please keep for future reference



#### Applications:

- Over current
- Under current
- Load detection
- Monitoring of electric heating system
- General application- for any electrical load, monitoring for under load and over load conditions
- Motors- monitoring for conditions such as overload, locked rotor and short circuit
- Genset- to ensure load current is within generator capacity
- Machinery- detecting broken drive belt on machinery

#### Product Features:

- **Over current protection with IDMT curve**
- **Under current protection**
- **Current loss protection**
- **Current unbalance protection**
- **4 Digits ultra bright Seven segment LED Display**
- **Trip relay DPM with Class 0.5**
- **True RMS measurement**  
The instrument measures distorted waveform up to 15th Harmonic.
- **Previous fault Storage**  
Instrument memorizes the last 15 fault occurred.
- **LED indications**
  - LED indication for Relay-1 and Relay-2 status.
  - Trip indication are displayed on 4 Digit display.
  - Dual color LED for per phase indication green color for normal condition and Red color for faulty condition.
- **AND function**  
User can use ANDing function to set trip on any two fault condition.
- **Configuration via USB-based PRKAB**  
User can configure the Meter using USB-based PRKAB.
- **Auto / Manual reset**  
In auto mode instrument automatically clears itself. If the device set into manual mode, the device must be manually reset by push button through display if it goes into fault.
- **User selectable 3 phase 3W or 4W**  
User can on site program the network connection as either 1P2W / 3P4W / 3P3W network using front panel keys
- **Adjustable set point for**
  - Over current
  - Under current
  - Current loss
  - Current Unbalance
- **Adjustable time delay for**
  - Over current
  - Under current
  - Current loss
  - Current Unbalance
- **Trip or Buzzer mode**  
Relay can be used to protect the system or simply to control the buzzer. Trip mode is for protection purpose and Buzz mode is for buzzer control.
- **User Selectable CT Secondary**  
The input rated current can be programmed on site as 1A to 5A using front panel keys.
- **Compliance to International Safety standards**  
Compliance to International Safety standard IEC 61010-1-2010

• **User selectable CT primary**

The Primary of Current Transformer can be programmed on site from 1 A to 999 kA for Current protection relay.

• **EMC Compatibility**

Compliance to International standard IEC 61326 - 1.

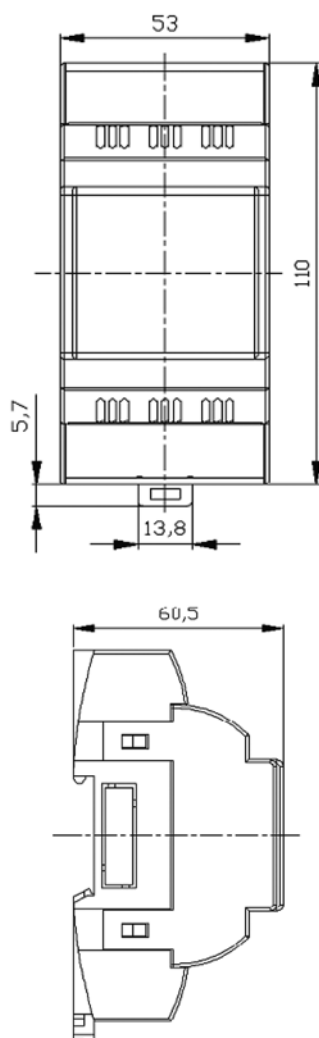
• **Onsite selection of Auto scroll / Fixed Screen**

User can set the display in auto scrolling mode or fixed screen mode using front panel keys.

**ANSI Numbers:**

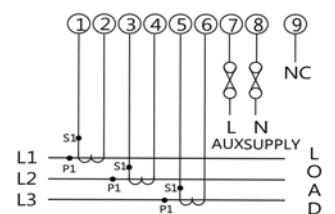
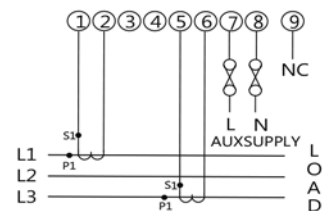
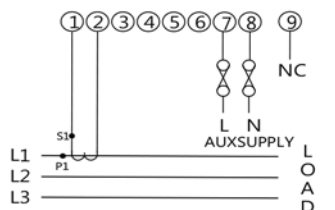
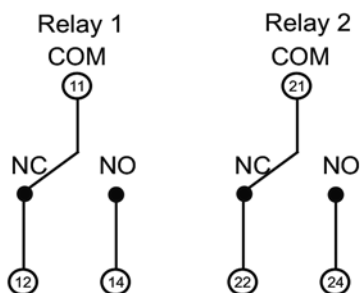
ANSI NO.	Acronyms
37	Under current relay
51	Over current relay
46	Current unbalance relay

**Dimensions Details:**

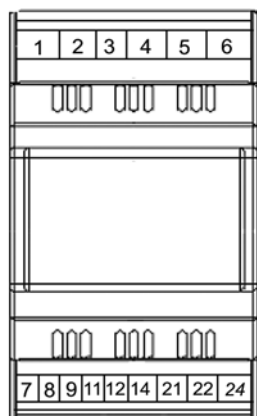


**Technical Specifications:**

<b>Input Current</b>	
Nominal Input Current (AC RMS)	5 A
Max Continuous Input Current	145% of CT Secondary
System CT Secondary Values	1 A to 5 A programmable on site
System CT Primary Values	1 A to 999 kA programmable on site
<b>Auxiliary Supply</b>	
Auxiliary Supply Voltage	60 V – 300V AC-DC
Higher Aux Nominal value	230 V AC/DC 50/60 Hz for AC Aux
	OR
External Lower Aux	20 V – 60 VDC / 20 V – 40 VAC
Lower Aux Nominal value	48 VDC / 24 VAC 50/60 Hz for AC Aux
Aux Supply Frequency	45 to 66 Hz range
<b>Overload Withstand</b>	
Current	20 x for 1 second, repeated 5 times at 5 min
<b>Operating Measuring Ranges</b>	
Current Range	5...140% of CT Secondary
Frequency	40...70Hz
<b>VA Burden</b>	
Input Current Burden	< 0.25 VA approx. per phase
Auxiliary Supply Burden	< 4 VA approx.
<b>Reference condition for Accuracy</b>	
Reference Condition	23°C +/- 2°C
Input waveform	Sinusoidal (distortion factor 0.005)
Input Frequency	50 or 60 Hz ±2%
Auxiliary supply voltage	Nominal Value ±1%
Auxiliary supply frequency	Nominal Value ±1%

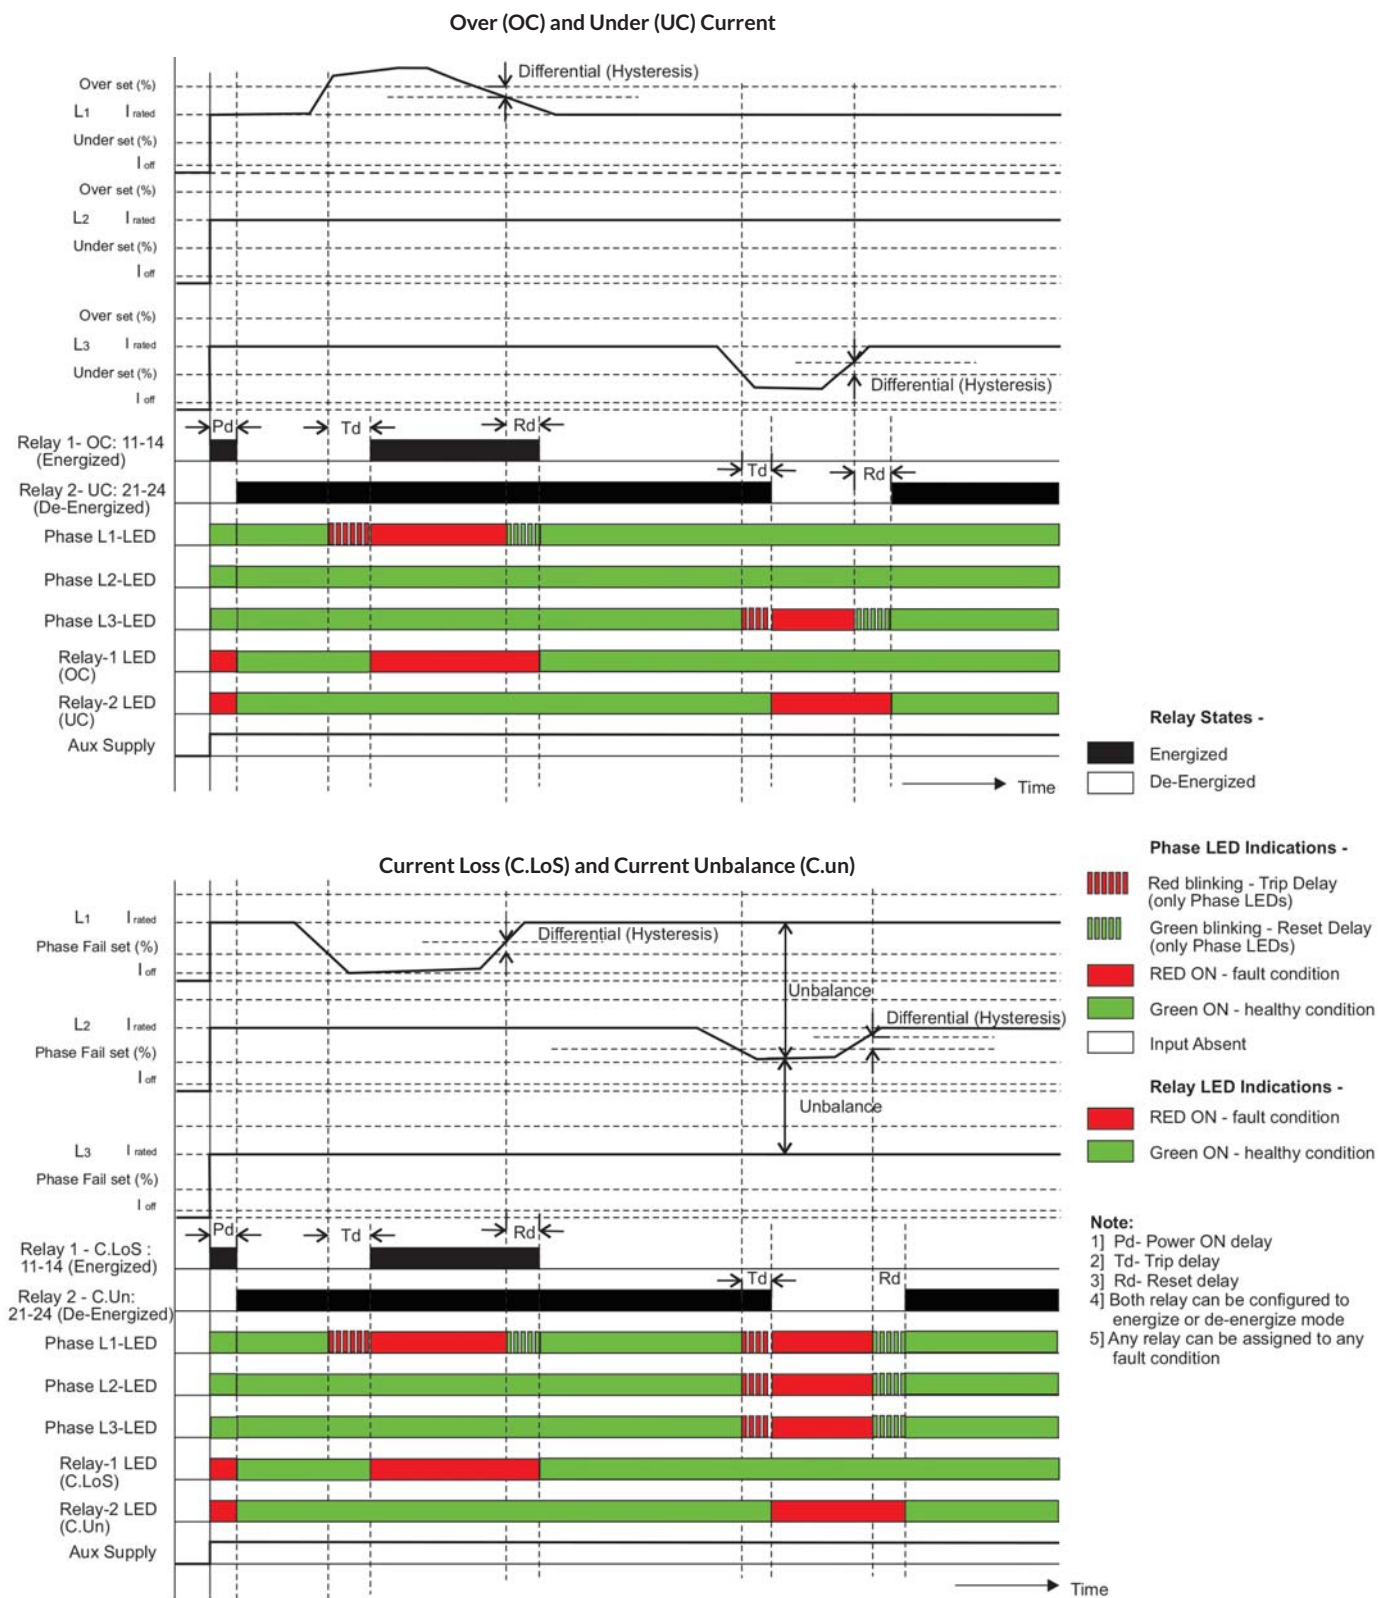
**Electrical Connection:**

**3 Phase 4 wire Unbalanced load**

**3 Phase 3 wire Unbalanced load**

**1 Phase 2 Wire**


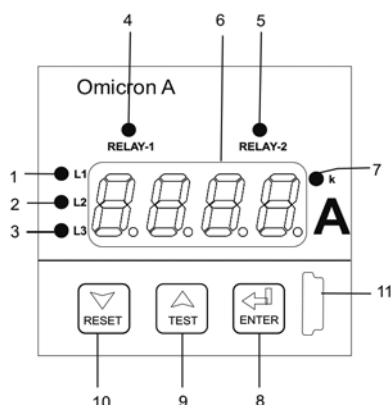
Note- Relay Contacts are shown  
in power off condition


**Technical Specifications:**

<b>Accuracy</b>	
Input Current	±0.5% of nominal value
Frequency	±0.2 Hz
Trip, Reset Delays, Power ON	±140 msec or ±5% of Set Delay, Whichever is Greater (WIG)
<b>Influence of Variations</b>	
Temperature coefficient :	0.05%/°C for current
<b>Applicable Standards</b>	
EMC	IEC 61326 - 1
Immunity	IEC 61000-4-3, 10V/m min – Level 3 industrial Low level
Safety use	IEC 61010-1-2010 , Permanently connected
IP for water & dust	IEC60529
Pollution degree:	2
Installation category:	300V CAT III / 600V CAT II
High Voltage Test	2.2 KV AC, 50Hz for 1 minute between all Electrical circuits
<b>Environmental</b>	
Operating temperature	-10 to +55°C
Storage temperature	-25 to +70°C
Relative humidity	0... 90% non condensing
Shock	15g in 3 planes
Vibration	10... 55 Hz, 0.15mm amplitude
Enclosure	IP20 (front face only)
<b>Relay Contacts</b>	
Types of output	1CO, 2CO, 1CO+1CO
Contact Ratings (Res. Load)	5A/250VAC/30VDC
Mechanical Endurance	1x10 <sup>7</sup> OPS
Electrical Endurance	NO- 3x10 <sup>4</sup> OPS for 1CO / 1CO+1CO relay NC- 1x10 <sup>4</sup> OPS 1x10 <sup>5</sup> OPS for 2CO relay
<b>Mechanical Attributes</b>	
Weight	300g Approx.

## Definite Time Characteristics:





### Operating elements:

- 1 - L1- LED : Indicates status of I1 . It Lights green when input current is healthy, red in fault condition, red blinking in trip delay and green blinking in reset delay.
- 2 - L2-LED : Indicates status of I2. It Lights green when input current is healthy, red in fault condition, red blinking in trip delay and green blinking in reset delay.
- 3 - L3- LED : Indicates status of I3. It Lights green when input current is healthy, red in fault condition, red blinking in trip delay and green blinking in reset delay.
- 4/5 - Relay-1 and Relay-2 status LED : Indicates status of relay-1 and relay-2 respectively. It lights green for relay in healthy condition and red for relay in trip condition.
- 6 - 4 Digit ultra bright 7 seg LED Display.
- 7 - K LED : It is used to show value in kA.
- 8 - Enter Key : Confirms changes of parameter setting. When on the measurement screen, holding for 3 sec enters in setup menu.
- 9 - Test Key : Increments setting value, move upwards in the menu or change parameter. It is also used to test operation of relay. Continuous holding of test key changes relay position and when release it resets the relay position (Only in healthy condition).
- 10 - Reset Key : Decrements setting value, move downwards in the menu or change parameter. It is also used to reset relay when manual reset mode is selected.
- 11 - Configuration via USB-based PRKAB.

### Parameter Settings:

Parameters	Omicron A
Trip setting for Current loss	5 - 99%
Trip setting for Current Unbalance	2 - 20%
Trip setting for over current (IDMT Disabled)	101 - 140%
Trip setting for over current (IDMT Enabled)	101 - 125%
Trip setting for under current	10 - 99%
Setting for Differential / hysteresis	1 - 15%*
Time Multiplier Setting (TMS)	0.1 - 1
Individual Faults can be deactivated as per system requirement	YES
Relay control mode	De-energize / Energize
Reset Delay	0.2 - 30s
Programmable Delay for over current	0 - 30s
Programmable Delay for under current	0 - 30s
Programmable Delay for Current loss	0 - 30s
Programmable Delay for current unbalance	0 - 30s
Power ON Delay	0.5 - 30s
CT primary current	1A - 999 kA
Rated current	1 to 5 A
Reset option	Auto / Manual

**Note** \* Differential setting range for current unbalance is limited as per its setting of trip point.

### Hysteresis Calculation Method:

#### Example: -

For "OC" (Over Current)

CT Secondary = 5 A.

Trip point = 101% of CT Secondary = 5.05 A

Hysteresis = 2% of CT Secondary = 0.1 A

Relay Reset point = Trip point - Hysteresis  
 = 5.05 - 0.1  
 = 4.95 A

#### Example: -

For "C.un" (Current Unbalance)

CT Secondary = 5 A

Trip point = 10% of CT Secondary = 0.5 A

Hysteresis = 2% of CT Secondary = 0.1 A

Relay Reset point = Trip point - Hysteresis  
 = 0.5 - 0.1  
 = 0.4 A

### Inverse Characteristics Curve [Over Current IDMT]:

Relay Characteristics type	$\alpha$	C
Standard Inverse	0.02	0.14
Very Inverse	1	13.5
Extremely Inverse	2	80
Long Inverse	1	120

To Calculate Relay Operating Time when IDMT is enabled, use the following formula

$$T = \frac{C}{\left(\frac{I}{I_s}\right)^\alpha - 1} \times TMS$$

Where,

T = Time in Sec (Operating time of relay).

I = Input Current.

I<sub>s</sub> = Secondary Current.

TMS = Time Multiplier Setting.

C = Constant for relay characteristics.

$\alpha$  = Constant representing inverse time type  
 ( $\alpha > 0$ )

### Ordering Information

Code	Description
OR10-I174H01000000	PROG. 3PH I 1-5A 60-300U 1CO
OR10-I174H02000000	PROG. 3PH I 1-5A 60-300U 2CO
OR10-I174H11000000	PROG. 3PH I 1-5A 60-300U 1CO+1CO

**Contact**



**Sifam Tinsley Instrumentation Ltd**

1 Warner Drive  
Springwood Industrial Estate  
Braintree, Essex  
CM7 2YW

Tel: 01376 335271  
E-mail: [sales@sifamtinsley.com](mailto:sales@sifamtinsley.com)

[www.sifamtinsley.co.uk](http://www.sifamtinsley.co.uk)