





**Multifunction Meters** 

Transducers & Isolators

**Temperature Controllers** 

**Converters & Recorders** 

**Digital Panel Meters** 

**Current Transformers** 

**Analogue Panel Meters** 

Shunts

**Digital Multimeters** 

**Clamp Meters** 

**Insulation Testers** 

# THETA 20A/20V TRANSDUCERS & ISOLATORS

User Manual - Issue 1.0

1



#### **Features**

- → Available in Single or Dual output type
- → Onsite selectable output type (DC current / DC voltage)
- → Accuracy class 0.2 (IEC/EN 60 688)
- → Seven Segment LCD Display
- → Rs485(Modbus) Communication



#### 1. Application

 $\label{thm:convert} \textbf{Theta 20A/20V} \ is used to measure and convert AC \ Voltage \ or \ Current input into a load independent DC \ current or \ voltage \ output. Output \ signal \ generated \ is \ proportional \ to the \ root \ mean \ square \ value \ of \ the \ input \ Current \ or \ Voltage.$ 

#### 2. Product Features


Measuring Input	AC Voltage/ Current input signal , sine wave or distorted wave form.
Analog Output (Single or dual)	Isolated analog output which can be set onsite to either voltage or current output.
Accuracy	Output signal accuracy class 0.2 as per International Standard IEC/EN 60 688.
Programmable Input / Output	The Transducer can be programmed onsite using front key & display or through programming port (COM) or through RS 485.
LED Indication	LED indication for power on and output type. (Current output : Red LED, Voltage output : Green LED)
Display Module	Optional 7 segment LCD display with backlit & keypad. For displaying measured parameters & onsite configuration of Input / Output.
RS485 Communication (Optional)	Optional RS485 communication is available. For reading measured parameters & onsite configuration of input / output.




## 3. Symbols and their meanings

Input AC Voltage / AC Current					
Start value of input					
Elbow value of input					
End value of input					
Output DC Voltage / DC Current					
Start value of output DC Voltage / DC Current					
Elbow value of output DC Voltage / DC Current					
End value of output DC Voltage / DC Current					
Rated value of output burden					
Nominal Frequency					

#### 4. Dimensions

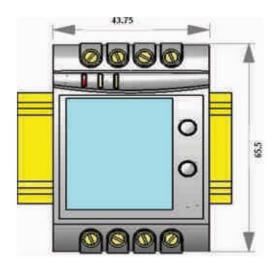

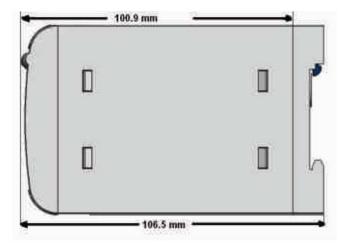

3



## 5. Technical Specifications

Pre-conditioning	ns for Accuracy					
Innut Variable		30 min acc. to IEC / EN 60 688				
Input Variable		Rated Voltage / Rated Current				
Input waveform		Sinusoidal, Form Factor 1.1107				
Input signal frequenc	:y	50 or 60Hz				
Auxiliary supply volta	age	At nominal range				
Output Load		$Rn = 7.5 \text{ V/Y2} \pm 1\%$ With DC current output signal $Rn = Y2/1 \text{ mA} \pm 1\%$ With DC voltage output signal				
Miscellaneous		Acc. to IEC / EN 60 688				
Accuracy (Acc. to IE	C / EN 60688)					
Reference Value		Output end Value Y2 (Voltage or Current)				
Basic Accuracy		0.2 * C				
Factor C (The highes	t value applies if calcu	llated C is less than 1, then C=1 applies)				
Linear characteristics	* * *	Bent characteristics				
$C = \frac{1 \frac{Y1}{Y2}}{1 \frac{X1}{X2}} \text{ or } C$	=1 For X	$C = \frac{1 \frac{Y0}{Y2}}{1 \frac{X0}{X2}} \text{ or } C = 1$				
Installation Data						
Mechanical Housing		Lexan 940 (polycarbonate) Flammability Class V-0 acc. To UL 94, self extinguishing, non dripping, free of halogen				
Mounting position		Rail mounting / wall mounting				
Weight		Approx. 0.4kg				
Auxiliary Power Sup	oply					
AC/DC Auxiliary Sup	pply	60V 300 VAC-DC ± 5% or 24 60 VAC-DC ± 10%				
AC Auxiliary supply frequency range		40 to 65 Hz				
Auxiliary		< 8VA for Single output				
supply consumption	60V300 VAC-DC	< 10VA for Dual output				
consumption		< 5 VA for Single output				
	24V60 VAC-DC					
		< 6 VA for Dual output				
Current Transducer						
Nominal input Current IN (AC RMS) (CT Secondary range)		1 A ≤ IN ≤ 5 A				
(CT Secondary range		1 A to 9999 A				
CT Primary range		4566 Hz				
	=N	4566 Hz				
CT Primary range		4566 Hz < 0.2 VA at IN				



## **Technical Specifications Continued**

Additional Error	
Temperature influence	± 0.2% / 10°C
Measuring Input X (**)	
Voltage Transducer (Beta 20A)	
Nominal input Voltage UN (AC RMS) (PT Secondary range)	57V ≤ UN ≤ 500 V
PT Primary range	57V to 400 kV
Nominal Frequency FN	4566 Hz
Nominal input Voltage burden	< 0.6 VA at UN
Overload Capacity	1.2 * UN continuously, 2* UN for 1 second, repeated 10 times at 10 minute intervals (Maximum 300V with power supply powered from measuring input).
No need of external potentiometer. Use of programmable PT secondary.	er can set full scale output for desired input with the help
Measuring Output Y( Single or Option	nal Dual) 🕒
Output type	Load independent DC Voltage or DC Current (Onsite selectable through DIP switches & programming.)
Load independent DC output (Y)	020mA / 420mA OR 010V.
Output burden with DC current output Signal	0 ≤ R ≤ 15V/Y2
Output burden with DC voltage output Signal	$Y2/(2 \text{ mA}) \le R \le \infty$
Current limit under overload R=0	≤ 1.25 * Y2 with current output ≤ 100 mA with voltage output
Voltage limit under R=∞	< 1.25 * Y2 with voltage output ≤ 30 V with current output
Residual Ripple in Output signal	≤ 1% pk-pk
Response Time	400 msec
Ambient tests	
EN 60 068-2-6	Vibration
Acceleration	±2g
Frequency range	101 5010Hz, rate of frequency sweep: 1 octave/minute
Number of cycles	10, in each of the three axes
EN 60 068-2-7	Shock
Acceleration	3 x 50g 3 shocks in each direction
EN 60 068-2-1/-2/-3	Cold, Dry, Damp heat
IEC 61000-4-2/-3/-4/-5/-6 EN 55 011	Electromagnetic compatibility.



## **Technical Specifications Continued**

Safety	
Protection Class	II (Protection Isolated, EN 61 010)
Protection	IP 40, housing according to EN 60 529 IP 20 ,terminal according to EN 60 529
Pollution degree	2
Installation Category	III
Insulation Voltage	1min. (EN 61 010-1) 7700VDC, Input versus outer surface 5200VDC, Input versus all other circuits 5200VDC, Auxiliary supply versus outer surface and output 690VDC, Output versus output versus each other versus outer surface.
Connection Terminal	
Connection Element	Conventional Screw type terminal with indirect wire pressure
Permissible cross section of the connection lead	≤ 4.0 mm² single wire or x 2.5 mm² fine wire
Influence of Variations	
As per IEC / EN 60688 standard. Output stability	< 30min
Environmental	
Nominal range of use	0-45°C
Storage temperature	-40 to 70 °C
Relative humidity of annual mean	≤ 75%
Altitude	2000m max


LED Indication		
ON LED	Aux.supply healthy condition	Green LED continuous ON
O/P1 LED	Output1 voltage selection Output1 Current selection	Green LED continuous ON Red LED continuous ON
O/P2 LED	Output2 voltage selection Output2 Current selection	Green LED continuous ON Red LED continuous ON

6




#### 6. Electrical Connections

Connection	Terminal details				
Measuring input	~	5			
	~	6			
Auxilliary Power supply	~ , +	7			
	~,-	8			
Measuring output - 1	+	1			
	-	2			
Measuring output - 2	+	3			
	-	4			

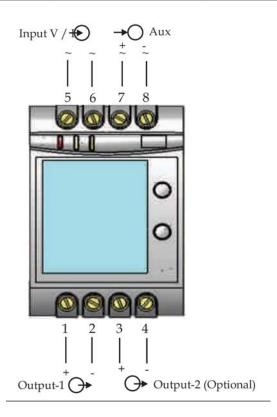

# 7. Output Characteristics

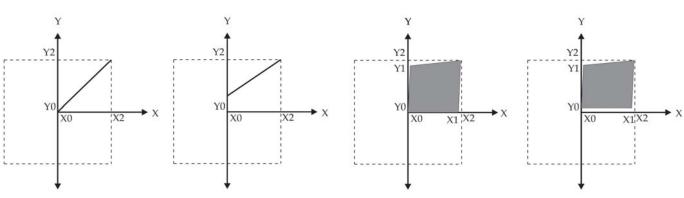

X0 = Start value of input

X1 = Elbow value of input

X2 = End value of input

YO = Start value of output

Y1 = Elbow value of output

Y2 = End value of output


Note: End value(Y2) of output cannot be changed onsite.



#### 8. Programming

Programming of transducer can be done in three ways	1) Programming Via Front LCD & two keys. 2) Programming Via optional RS485(MODBUS) communication port. ( Device address, PT Ratio, CT Ratio, Password, communication parameter, Output Type & simulation mode can be programmed). 3) Programming Via Programming port available at front of Transducers using optional PRKAB601 Adapter.
Programming Via Programming port (COM)	A PC with RS 232 C interface along with the programming cable PRKAB 601 and the configuration software are required to Program the transducers
The connections between	"PC  PRKAB  Transducer. The power supply must be applied to Transducer before it can be programmed. The Configuration software is supplied on a CD. The programming cable PRKAAB601 adjusts the signal level and provides the electrical insulation between the Transducers.
Configuring Rish Con Transducer	To Configure the transducer Input / output one of the three programming methods can be adapted along with mechanical switch setting (DIP switch setting on PCB)
DIP Switch Setting for OUTPUT	Type of output (current or voltage signal) has to be set by DIP switch For programming of DIP switch the user needs to open the transducer housing & set the DIP switch located on PCB to the desired output type Voltage or Current. Output range changing is not possible with DIP switch setting.

The four pole DIP switch is located on the PCB in the Transducer

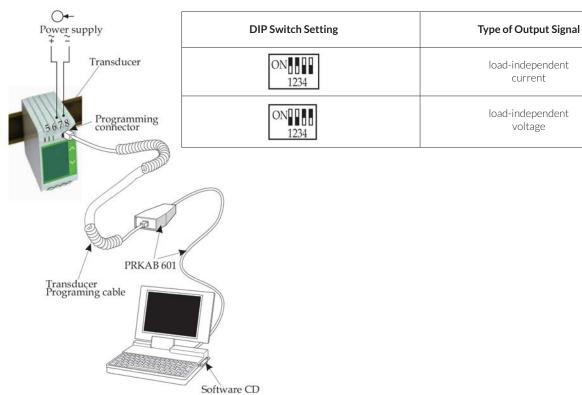



## 9. Ordering Information (Standard Version)

Product Code	TT20-	Х	XX	Х	Х	Х	Х	Х	00000
Product Type	THETA 20A	- 1							
	THETA 20V	V							
Input Range	Prog. 15A 1-5A		74						
	Prog. 57500V 57-500V		8E						
	60-300U			Н					
Power Supply	24-60U			F					
Output	1 O/P 1O				1				
	2 O/P 2O				2				
Display Module	With Display					D			
	Without Display WD					Z			
RS485 Module	With RS-485 485						R		
	Without RS-485						Z		
Prog. Cable	With PRKAB 601 PRK		-		-			С	
	Without PRKAB 601					·		Z	



#### Contact



01376 335271

E-mail: sales@sifamtinsley.com

Tel:

1 Warner Drive Springwood Industrial Estate Braintree, Essex CM7 2YW

www.sifamtinsley.co.uk

Issue 1.0 TRANSDUCERS & ISOLATORS 9